Cast Photo/Movies/Music



Step 5

Step 1

Download

mobile

device

Tv must be on and connected to same router, select Next Make sure power cord is plugged in before starting. Turn on the Washer, Dryer, Styler, Robot Vacuum, TV and Air Purifier. ഗ

 \times

Step 6

ΤV

Select the

Sele	Select a device to add.				
SEARCH	I NEARBY	(>	S		
TV					
SELECT	MANUAL	.LY	Q		
Applian	ces				
Ö					
Laundry Product s	Dryer	Styler	TV		
			5		
Refriger ator	Wine Cellar	Microwa ve	Dishwas her		
(71)	E	8:			

<u>Step /</u>	
Enter the	
is displayed	
on the TV	
screen	





<u>Step 9</u>

The TV and device will be connected once this message appears



The device has been successfully registered.

Go to Home

<u>Step 11</u>

Open the relevent catergory and folder



← Mobile Content

vourites

<u>3160 12</u>
Select the
wanted files
and press
ОК

Agree any
messages
the TV
screen

your family or roommates. Invito Jonesy 's Home -Front Room Disconnect TV ON

Share your Home with



Trending on TV ((·)) TV ~

○ 모두 선택

≡

Step 9

Арр

Select your

TV from the

Homepage



0 selected

Step 10 To "cast" photos, videos etc

Ĉ

from the device select the "Share" option





Agree any	
messages on	
the TV	
ccroop	

Cancel OK